

















| Original | | Rechange | | Original | | Rechange | |
|----------|------------|----------|------------------|----------|-----------|----------|-----------------------------|
| | Standby/On | | Power | | Select | | OK |
| | Power AUX | | Shift + Power | | Right | | Right |
| | 1 AUX | | Shift + 1 | | Test | | Text / Goto |
| | 2 AUX | | Shift + 2 | | Down | | Down |
| | 3 AUX | | Shift + 3 | | Return | | Back / Return |
| | 4 AUX | | Shift + 4 | | Mute | | Mute / Dimmer |
| | 5 AUX | | Shift + 5 | | Vol+ | | Vol+ |
| | 6 AUX | | Shift + 6 | | Vol- | | Vol- |
| | 7 AUX | | Shift + 7 | | TV | | 1 |
| | 8 AUX | | Shift + 8 | | DVD | | 2 |
| | 9 AUX | | Shift + 9 | | Sleep | | Sleep / Timer |
| | 0 AUX | | Shift + 0 | | AUX | | 7 |
| | Surround | | Eject / Surround | | VCR | | 4 |
| | CH Level | | Info / Angle | | Stereo | | Red / Netflix / Search |
| | Up | | Up | | 3 Beam | | Green / APP / Repeat |
| | Menu | | Menu / Home | | 5 Beam | | Yellow / YouTube / Repeat |
| | Left | | Left | | ST+3 Beam | | Blue / Prime Video / Random |





| Original | | Rechange | | Original | | Rechange | |
|---|-------|---|-----------------------|----------|--|----------|--|
|  | Power |  | Power | | | | |
|  | 1 |  | 1 | | | | |
|  | 2 |  | 2 | | | | |
|  | 3 |  | 3 | | | | |
|  | 4 |  | 4 | | | | |
|  | 5 |  | 5 | | | | |
|  | 6 |  | 6 | | | | |
|  | 7 |  | 7 | | | | |
|  | 8 |  | 8 | | | | |
|  | 9 |  | 9 | | | | |
|  | 0 |  | 0 | | | | |
|  | << |  | >> / Tune+ | | | | |
|  | >> |  | l<< / Preset- | | | | |
|  | Stop |  | Stop / Hold | | | | |
|  | Pause |  | Pause / Step / Freeze | | | | |
|  | Play |  | Play / Slow | | | | |

