



Original		Rechange		Original		Rechange	
	Power		Power		Sound		Shift + Dual
	D/A		TV/R		Vol +		Vol +
	Source		AV		Vol -		Vol -
	1		1		Mute		Mute
	2		2		CH +		Ch +
	3		3		CH -		Ch -
	4		4		Menu		Menu
	5		5		EPG		Guide
	6		6		Up		Up
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0		0		OK		Ok
	Last		Pre Ch		I / II		Dual
	Info		Info		Still		List
	FAV		Shift + Pre Ch		Zoom		Eject
	Picture		Shift + Format		Exit		Exit





	Original	Recharge	
Browse Radio	Radio / Browse	SHIFT + SEARCH TV/R	Shift + TV/R
Rotate T.Shift	T.Shift / Rotate	SHIFT + TIMER AV	Shift + AV
Page up Audio	Audio / Page up	SHIFT + + CH	Shift + Ch +
Page up Audio	Audio / Page up	SHIFT + AD SUBT	Shift + Subt
Page down Subtitle	Subtitle / Page down	AD SUBT	Subt
Page down Subtitle	Subtitle / Page down	SHIFT + CH -	Shift + Ch -
D/EMP	D/EMP	HOME SMART	Smart
Media PVR	Media / PVR	APP MEDIA	Media
Play/Pause	Play / Pause	PLAY MODE	Play
Play/Pause	Play / Pause	II	Pause
Stop	Stop	■	Stop
Red / <<<	Red / <<<	A	Red
Red / <<<	Red / <<<	<<<	<<<
Green / >>>	Green / >>>	B	Green
Green / >>>	Green / >>>	>>>	>>>
Yellow / I<<<	Yellow / I<<<	C	Yellow
Yellow / I<<<	Yellow / I<<<	<<<	I<<<

	Original	Recharge	
Blue / >>I	Blue / >>I	D	Blue
Blue / >>I	Blue / >>I	>>>	>>I
Text / Setup	Text / Setup	REPEAT TEXT	Text
Size	Size	PICTURE FORMAT	Format
Reveal	Reveal	SETTINGS OPT	Options
Cancel	Cancel	RETURN BACK	Back
Sleep Hold	Hold / Sleep	PROG SLEEP	Sleep
Index	Index	SHIFT + DISPLAY INFO	Shift + Info
Internet Sub.Code	Sub.Code /	ECO 3D	3D
Mix	Mix	SHIFT + SETTINGS OPT	Shift + Options

