



Original		Rechange		Original		Rechange	
	Power		Power		Vol-		Vol-
	Mute		Mute / Dimmer		Source		AV / Input / RDS
	1		1		CH-		CH- / Page-
	2		2		USB		Shift + 8
	3		3		Option		Setup / OPT /
	4		4		Info		Info / Angle
	5		5		FAV		Fav / Marker / PC
	6		6		Menu		Menu / Home
	7		7		EPG		Guide / EPG / -/--
	8		8		Up		Up
	9		9		Left		Left
	Home		Shift + Menu /		OK		OK
	0		0		Right		Right
	YouTube		Shift + Yellow / YouTube /		Down		Down
	Vol+		Vol+		Back		Back / Return
	TV		TV/Radio /		Exit		Exit / Cancel / Clear
	CH+		CH+ / Page+		Netflix		Shift + Red / Netflix / Search



