



Original		Rechange		Original		Rechange	
	Standby		Power		Pic. Mode		Picture / Format
	Mute		Mute / Dimmer		S. Mode		Sound / Title
	1		1		Up		Up
	2		2		Left		Left
	3		3		OK		OK
	4		4		Right		Right
	5		5		Exit		Exit / Cancel / Clear
	6		6		Down		Down
	7		7		Menu		Menu / Home
	8		8		Source		AV / Input / RDS
	9		9		Vol+		Vol+
	CH List		Smart / List		TV / Radio		TV/Radio /
	0		0		CH+		CH+ / Page+
	Recall / Mouse		Back / Return		Vol-		Vol-
	Aspect		Shift + Picture / Format		Display		Display / Media
	Sleep		Sleep / Timer		CH-		CH- / Page-
	Audio		Audio / Lang I/II		Red		Red / Netflix / Search



