



Original	Rechange
Power Receiver	Power
BD	Yellow / YouTube / Repeat
DVD	2
DVR / BDR	AV / Input / RDS
HDMI	0
TV/SAT	TV/Radio /
CD	3
HMG	Shift + AV / Input / RDS
ADPT	Eject / Surround
iPod USB	Shift + 8
Tuner	6
Video	4
Input Select	Shift + Left
Input Select ~	Shift + Right
Master Volume	Vol+
Master Volume	Vol-
Mute	Mute / Dimmer

Original	Rechange
Top Menu	D.Menu / Top
Band	Subtitle / EQ
Audio	Audio / Lang I/II
Tune+	Shift + >> /
Up	Up
Tools	Setup / OPT /
T.Edit	Text / Goto
Video	Picture / Format
Left	Left
Preset -	Shift + I<< / Preset-
Enter	OK
Preset +	Shift + >>I / Preset+
Right	Right
iPod CTRL	Smart / List
Home Menu	Menu / Home
Tune-	Shift + << /
Down	Down





	Original	Rechange		Original	Rechange
	Return	Back / Return		3 Tuner	+ Shift + 3
	Repeat	Green / APP / Repeat		Audio DVD	+ Shift + Audio / Lang I/II
	Random	Blue / Prime Video / Random		4 Tuner	+ Shift + 4
	<<	<< / Tune-		Signal Sel	+ Shift + Setup / OPT / Tools
	Phase CTRL	Red / Netflix / Search		MCACC	+ Shift + Blue / Prime
	Play	Play / Slow		5 Tuner	5
	>>	>> / Tune+		6 Tuner	+ Shift + 6
	Status	Exit / Cancel / Clear		Sleep	Sleep / Timer
	I<<	I<< / Preset-		Disp	Display / Media
	Pause	Pause / Step / Freeze		7 Tuner	7
	MPX	Zoom / Size		CH Level	+ Shift + CH+ /
	PQLS	+ Shift + Menu /		8 Tuner	8
	Stop	Stop / Hold		A.ATT.	+ Shift + Yellow / YouTube /
	>>I	>>I / Preset+		9 Tuner	9
	1 Tuner	1		Dimmer	+ Shift + Mute / Dimmer
	S.Retriever	+ Shift + Text /		CH +	CH+ / Page+
	2 Tuner	+ Shift + 2		D.Access	+ Shift + D.Menu / Top Menu





Original	Recharge
Power Source	Power
DVD	Shift + 2
Top Menu	D.Menu / Top
Up	Up
Left	Left
Enter	Shift + OK
Enter	OK
Right	Right
Down	Down
Return	Back / Return
Menu	Menu / Home
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
I<<	I<< / Preset-
Pause	Pause / Step / Freeze
Stop	Stop / Hold

Original	Recharge
>>I	>>I / Preset+
1	1
2	2
3	3
Audio	Audio / Lang I/II
4	4
5	5
6	6
7	7
8	8
9	9
0	0





Original	Recharge
Power Source	Power
Tuner	+ Shift + 6
Master Volume	Vol+
Master Volume	Vol-
Mute	Mute / Dimmer
Band	Subtitle / EQ
Tune+	>> / Tune+
T.Edit	Text / Goto
Preset-	I<< / Preset-
Enter	OK
Preset+	>>I / Preset+
Search	Red / Netflix / Search
Tune-	<< / Tune-
Menu	Menu / Home
MPX	Zoom / Size
1	1
2	2

Original	Recharge
3	3
4	4
5	5
6	6
Disp	Display / Media
7	7
8	8
9	9
D.Access	D.Menu / Top
0	0
Class	+ Shift + Display / Media

