



	Original	Rechange		Original	Rechange
	Power Receiver		Power		3 Tuner
	DVD		2		HDMI Out
	BD		1		4 Tuner
	DVR		5		Signal Sel
	HDMI		0		MCACC
	TV		TV/Radio /		5 Tuner
	CD		3		6 Tuner
	CD-R		9		Sleep
	Home Media		Shift + Menu /		7 Tuner
	iPod / USB		8		SBch
	Tuner		6		8 Tuner
	Video 1		4		A.ATT.
	Video 2		7		9 Tuner
	↶ Input Select		Shift + Left		Dimmer
	1 Tuner		Shift + 1		D.Access
	Input Select ↷		Shift + Right		CH Level
	2 Tuner		Shift + 2		0 Tuner
					Shift + 3
					AV / Input / RDS
					Shift + 4
					Shift + Setup / OPT / Tools
					Fav / Marker / PC
					Shift + 5
					Shift + 6
					Sleep / Timer
					Shift + 7
					Eject / Surround
					Shift + 8
					Yellow / YouTube / Repeat
					Shift + 9
					Shift + Mute / Dimmer
					Shift + D.Menu / Top Menu
					Shift + CH+ /
					Shift + 0





Original	Recharge
Class	Shift + Display / Media
Enter (Class)	Shift + OK
Master Volume	Vol+
Master Volume	Vol-
Mute	Mute / Dimmer
Top Menu	D.Menu / Top
Band	Subtitle / EQ
Audio	Audio / Lang I/II
Tune+	Shift + >> /
Up	Up
Tools	Setup / OPT /
T.Edit	Text / Goto
Video	Picture / Format
Left	Left
Preset -	Shift + << / Preset-
Enter	OK
Preset +	Shift + >> / Preset+

Original	Recharge
Right	Right
iPod CTRL	Smart / List
Home Menu	Menu / Home
Tune-	Shift + << /
Down	Down
Return	Back / Return
Auto / Alc / Direct	Info / Angle
Stereo	Sound / Title
Repeat	Green / APP / Repeat
Standard	Shift + Smart / List
Random	Blue / Prime Video / Random
Adv. Surr.	Guide / EPG / -/-
<<	<< / Tune-
Phase CTRL	Red / Netflix / Search
Play	Play / Slow
>>	>> / Tune+
Status	Exit / Cancel / Clear





	Original	Rechange	Original	Rechange
	I<<	 I<< / Preset-		
	Pause	 Pause / Step / Freeze		
	MPX	 Zoom / Size		
	PQLS	 Shift + Info / Angle		
	Stop	 Stop / Hold		
	>>I	 >>I / Preset+		
	Audio DVD	 Shift + Audio / Lang I/II		
	Disp	 Display / Media		
	CH -	 CH- / Page-		
	CH +	 CH+ / Page+		







 

 

 







 





 

 







Original	Recharge
Power Source	Power
DVD	Shift + 2
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Top Menu	D.Menu / Top
Up	Up
Left	Left
Enter	Shift + OK
Enter	OK

Original	Recharge
Right	Right
Down	Down
Return	Back / Return
Menu	Menu / Home
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
I<<	I<< / Preset-
Pause	Pause / Step / Freeze
Stop	Stop / Hold
>>I	>>I / Preset+
Audio	Audio / Lang I/II





Original	Recharge
 Power Source	 Power
 Tuner	 Shift + 6
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 D.Access	 D.Menu / Top
 0	 0
 Class	 CH- / Page-
 Master Volume	 Vol+
 Master Volume	 Vol-
 Mute	 Mute / Dimmer

Original	Recharge
 Band	 Smart / List
 Tune+	 >> / Tune+
 Tune+	 Up
 T.Edit	 Text / Goto
 Preset-	 Left
 Preset-	 I<< / Preset-
 Enter	 OK
 Preset+	 >>I / Preset+
 Preset+	 Right
 Search	 Red / Netflix / Search
 Tune-	 << / Tune-
 Tune-	 Down
 Menu	 Menu / Home
 MPX	 CH+ / Page+
 Disp	 Display / Media

