 


 
 


 
 

 









 








 
 










 

 









	Original	Rechange		Original	Rechange
	Power		Power		0
	Open/Close		Eject		Back
	FM		Red		Media
	DVD		Green		Format
	AUX		Yellow		TV/R
	USB		Blue		Dual
	Sleep		Sleep		Shift + Dual
	Dimmer		D. Menu		Subt
	1		1		Smart
	2		2		Options
	3		3		Info
	4		4		Up
	5		5		Ch +
	6		6		Down
	7		7		Ch -
	8		8		Right
	9		9		Left



