



 


 



 






































 




 







 

 

 




Original	Recharge	Original	Recharge
 RCVR On	 Power	 RCVR Test / Menu	 Menu
 RCVR Standby	 Shift + Power	 RCVR Audio	 Dual
 RCVR Sleep	 Sleep	 RCVR Level	 Media
 RCVR Return	 Back	 RCVR Level Up	 Smart
 RCVR Setup	 Options	 RCVR I<<	 I<<
 RCVR Disc+	 Ch +	 RCVR Play	 Play
 RCVR Disc-	 Ch -	 RCVR >>I	 >>I
 RCVR Up	 Up	 RCVR <<	 <<
 RCVR Left	 Left	 RCVR Stop	 Stop
 RCVR Enter	 Ok	 RCVR >>	 >>
 RCVR Right	 Right	 RCVR Rec /	 Rec
 RCVR Down	 Down	 RCVR Pause / Play Rev.	 Pause
 RCVR Vol+	 Vol +	 Open / Close	 Eject
 RCVR Vol-	 Vol -	 RCVR Input Sel.	 1
 RCVR Muting	 Mute	 RCVR Input Sel.	 2
 RCVR CH Sel / Top Menu	 Shift + Menu	 RCVR Input Sel.	 3
 RCVR CH Sel / Top Menu	 D. Menu	 RCVR Input Sel.	 4






 
 






 













 












 




 







 

 

 

 





 






Original	Recharge
TAP RCVR Input Sel.	5 5
V5 RCVR Input Sel.	6 6
V3 RCVR Input Sel.	7 7
V4 RCVR Input Sel.	8 8
TUN RCVR Input Sel.	9 9
PH RCVR Input Sel.	0 0
1 STEREO RCVR Stereo	SHIFT + 1 Shift + 1
2 DIRECT RCVR Direct	SHIFT + 2 Shift + 2
3 DSP ► RCVR DSP ►	SHIFT + 3 Shift + 3
4 SURR RCVR SURR	SHIFT + 4 Shift + 4
5 THX RCVR THX	SHIFT + 5 Shift + 5
6 DSP ◀ RCVR ◀ DSP	SHIFT + 6 Shift + 6
7 SPA RCVR SP A	SHIFT + 7 Shift + 7
8 SPB RCVR SP B	SHIFT + 8 Shift + 8
9 Re-EQ RCVR Re-EQ	SHIFT + 9 Shift + 9
0 DIMMER RCVR Dimmer	SHIFT + 0 Shift + 0
+10 DISPLAY RCVR Display	DISPLAY INFO Info

Original	Recharge
+10 DISPLAY RCVR Display	GUIDE Guide
SEARCH ZONE ? ENTER RCVR Zone 2	FAV PRE-CH Pre Ch





Original	Rechange	Original	Rechange
 ON	 Power	 Subtitle	 Subt
 STDBY	 Shift + Power	 I<<	 I<<
 Return	 Back	 Play	 Play
 Setup	 Options	 >>I	 >>I
 Disc+	 Ch +	 <<	 <<
 Disc-	 Ch -	 Stop	 Stop
 Up	 Up	 >>	 >>
 Left	 Left	 Random	 Text
 Enter	 Ok	 Pause	 Pause
 Right	 Right	 Open / Close	 Eject
 Down	 Down	 1	 1
 Vol+	 Vol +	 2	 2
 Vol-	 Vol -	 3	 3
 Muting	 Mute	 4	 4
 Top Menu	 D. Menu	 5	 5
 Menu	 Menu	 6	 6
 Angle	 Format	 7	 7




 



 















 



 

 







 







 








	Original	Rechange		Original	Rechange
	8		8		
	9		9		
	0		0		
	+10		Guide		
	Search		TV/R		





 




Original		Rechange		Original		Rechange	
	ON		Power		3		3
	STDBY		Shift + Power		4		4
	Disc+		Ch +		5		5
	Vol+		Vol +		6		6
	Vol-		Vol -		7		7
	Muting		Mute		8		8
	I<<		I<<		9		9
	Play		Play		0		0
	>>I		>>I		+10		Guide
	<<		<<				
	Stop		Stop				
	>>		>>				
	Random		Text				
	Pause		Pause				
	Open / Close		Eject				
	1		1				
	2		2				





Original		Rechange		Original		Rechange	
	ON		Power		3		3
	STDBY		Shift + Power		4		4
	Vol+		Vol +		5		5
	Vol-		Vol -		6		6
	Muting		Mute		7		7
	I<<		I<<		8		8
	Play		Play		9		9
	>>I		>>I		0		0
	<<		<<		+10		Guide
	Stop		Stop		Enter		Pre Ch
	>>		>>		Enter		Ok
	Rec / Random		Text				
	Rec / Random		Rec				
	Pause		Pause				
	Open / Close		Eject				
	1		1				
	2		2				

