
 

 




	Original	Rechange
	Power	 Power
	F	 Menu
	Vol+	 Vol +
	Vol-	 Vol -
	ASC	 Smart
	Mute	 Mute
	Standard	 Dual
	Cinema	 TV/R
	Play	 Play
	Pause	 Pause
	>>I	 >>I
	I<<	 I<<
	DRC On	 Red
	DRC Off	 Green
	Woofer Level+	 Ch +
	Woofer Level-	 Ch -
	Auto Power On	 Yellow

	Original	Rechange
	Auto Power Off	 Blue

