



Original	Recharge	Original	Recharge
Open / Close	Eject / Surround	Subtitle	Subtitle / EQ
TV Input	AV / Input / RDS	Mute	Mute / Dimmer
TV Power	Shift + Power	Red	Red / Netflix / Search
Power	Power	Green	Green / APP / Repeat
1	1	Yellow	Yellow / YouTube / Repeat
2	2	Blue	Blue / Prime Video / Random
3	3	Top Menu	D.Menu / Top
Vol+	Vol+	Up	Up
4	4	Pop Up / Menu	Menu / Home
5	5	Left	Left
6	6	OK	OK
7	7	Right	Right
8	8	Return	Back / Return
9	9	Down	Down
Vol-	Vol-	Options	Setup / OPT /
Audio	Audio / Lang I/II	Home	Smart / List
0	0	Home	Shift + Menu / Home



