

 
















 


 

 



 

























 

 





Original	Recharge	Original	Recharge
 Open / Close	 Eject / Surround	 Subtitle	 Subtitle / EQ
 TV Input	 AV / Input / RDS	 Mute	 Mute / Dimmer
 TV Power	 Shift + Power	 Red	 Red / Netflix / Search
 Power	 Power	 Green	 Green / APP / Repeat
 1	 1	 Yellow	 Yellow / YouTube / Repeat
 2	 2	 Blue	 Blue / Prime Video / Random
 3	 3	 Top Menu	 D.Menu / Top
 Vol+	 Vol+	 Up	 Up
 4	 4	 Pop Up / Menu	 Menu / Home
 5	 5	 Left	 Left
 6	 6	 OK	 OK
 7	 7	 Right	 Right
 8	 8	 Return	 Back / Return
 9	 9	 Down	 Down
 Vol-	 Vol-	 Options	 Setup / OPT /
 Audio	 Audio / Lang I/II	 Home	 Smart / List
 0	 0	 Home	 Shift + Menu / Home



