








 

 
 



 

 
 
 



 












 
 

 
 


 







 








 



 

 




 




Original		Rechange		Original		Rechange	
	Standby/On		Power		Input/Repeat		AV
	Eject		Eject		Prog Up		Ch +
	1/Slow-		1		Prog Down		Ch -
	2		2		TRK Up		Vol +
	3/Slow+		3		TRK Down		Vol -
	4/← Shuttle		4		Menu		Menu
	5		5		Speed		Format
	6/Shuttle →		6		Audio		Dual
	7/▼ V.Lock		7		Left		Left
	8		8		Tv/VCR		TV/R
	9/▲ V.Lock		9		Play		Play
	0/F.ADV		0		Pause		Pause
	CLR/RST		Exit		Stop		Stop
	Q-Pro		Options		>>		>>
	IPC		Smart		<<		<<
	Display		Info		Rec		Rec
	Index		Guide		Up		Up





Original	Recharge	Original	Recharge
 Down	 Down		
 Right	 Right		
 OK	 Ok		

