



	Original	Rechange		Original	Rechange
	Standby/On		Power		Set Up
	1		1		Set
	2		2		Menu
	3		3		On Screen
	4		4		Up
	5		5		Down
	6		6		Right
	7		7		Left
	8		8		Enter
	9		9		Back
	0		0		Play DVD/CD
	10		Guide		FM/AM/AUX
	+10		Pre Ch		Disc Select
	Display		Info		<> Tape
	Cancel		Exit		Pause
	Top Menu		Shift + Menu		Stop
	Return		Shift + Back		Disc Rec Mode

	Original	Rechange		Original	Rechange
	Options		Options		TV
	D. Menu		D. Menu		DVD
	Menu		Menu		SAT
	Red		Red		AUX
	Up		Up		PLAY MODE
	Down		Down		REC MODE
	Right		Right		FF
	Left		Left		STOP
	Ok		Ok		DISC NAV
	Back		Back		LIST
	Play		Play		SOUND
	FM/AM/AUX		TV/R		AD
	Disc Select		Blue		SETTINGS
	<> Tape		Yellow		DUAL
	Pause		Pause		SUBT
	Stop		Stop		PICTURE
	Disc Rec Mode		Rec		ECO





Original	Rechange
I<<	I<<
>>I	>>I
<</Slow-	<<
>>/Slow+	>>
Sleep	Sleep
Clock/Timer	AV
Dimmer	Media
A.Standby	Shift + Power
Bass/Treble	Shift + Dual
Fade Muting	Mute
Rhythm AX	Smart
Vol+	Vol +
Vol-	Vol -
Repeat	Text
FM Play Mode	Green
Repeat A-B	Shift + Text
REV Mode	Shift + Rec

Original	Rechange
I<< Group/Title	Ch -
Group/Title >>I	Ch +
Audio	Dual
Subtitle	Subt
Angle	Shift + TV/R
Zoom	Eject
VFP	Shift + Subt
DVD Level	List
Progressive	Format
Page+	Shift + Ch +
Page-	Shift + Ch -
3D Phonic	3D

