







	Original	Recharge
	Power On	 Power
	Mute	 Mute
	TV/Radio	 TV/R
	FAV	 Pre Ch
	TV/DBS	 Smart
	VCR/DBS	 Media
	1	 1
	2	 2
	3	 3
	4	 4
	5	 5
	6	 6
	7	 7
	8	 8
	9	 9
	0	 0
	Find	 3D

	Original	Recharge
	Recall	 Back
	Up / CH+	 Up
	Up / CH+	 Ch +
	Down / CH-	 Down
	Down / CH-	 Ch -
	Right / Vol+	 Right
	Right / Vol+	 Vol +
	Left / Vol-	 Left
	Left / Vol-	 Vol -
	OK / List	 Ok
	OK / List	 List
	Menu	 Menu
	Exit	 Exit
	PG/UP	 >>
	PG/DW	 <<
	Red / Pause	 Red
	Red / Pause	 Pause





Original	Rechange	Original	Rechange
ZOOM	Green / Zoom	B	Green
ZOOM	Green / Zoom	ZOOM	Eject
T/TEXT	Yellow / T/Text	C	Yellow
T/TEXT	Yellow / T/Text	REPEAT	Text
T/TEXT	Yellow / T/Text	TEXT	Text
TIMER	Blue / Timer	D	Blue
TIMER	Blue / Timer	SHIFT + TIMER	Shift + AV
EDIT	White / Edit	SETTINGS	Options
EDIT	White / Edit	OPT	Options
SUB.T	Sub.T	AD	Subt
SUB.T	Sub.T	SUBT	Subt
AUDIO	Audio	SOUND	Dual
AUDIO	Audio	DUAL	Dual
INFO	Info	DISPLAY	Info
INFO	Info	INFO	Info
SIGNAL	Signal	PROG	Sleep
SIGNAL	Signal	SLEEP	Sleep
F1	F1	SHIFT + 1	Shift + 1
F2	F2	SHIFT + 2	Shift + 2
-[]-	-[]-	E-MANUAL	D. Menu
EPG	EPG	D.MENU	D. Menu
SAT	SAT	GUIDE	Guide
EPG	EPG	-/--	Guide
SAT	SAT	GUIDE	Guide
Format	Format	TIMER	AV
Format	Format	AV	AV
Format	Format	PICTURE	Format
Format	Format	FORMAT	Format

