




 










Original	Recharge
Power On	Power
Power Off	Shift + Power
Zone 2	Media
Mute	Mute
Cable/SAT	Shift + 1
STB	Shift + 2
TV	Shift + 3
Disc	Shift + 4
MHL	Shift + 5
AUX	Shift + 6
Audio	Shift + 7
Game	Shift + 8
AVR	Shift + 9
USB	Shift + Guide
Network	Shift + 0
Radio	Shift + Pre Ch
Surr Mode	Dual

Original	Recharge
OSD Menu	Menu
Up	Up
Left	Left
OK	Ok
Right	Right
Down	Down
Back/Exit	Back
Home	Smart
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9






 





 

 



 

 

 

 














Original	Rechange	Original	Rechange
	0		0
	Clear		Exit
	Test		Text
	Vol+		Vol +
	Vol-		Vol -
	Delay		Options
	Info/Option		Info
	Sleep		Sleep
	Dim		List
	CH/Tuner Up		Ch +
	CH/Tuner Down		Ch -
	P-Scan / Top		D. Menu
	Direct		TV/R
	Mem		Rec
	RDS/*		Subt
	I<		I<<
	<<		<<

Original	Rechange	Original	Rechange
	>>		>>
	>		>>
	Stop		Stop
	Play		Play
	Pause		Pause
	PrevCH		Pre Ch













 


Original	Recharge
 Power On	 Power
 Power Off	 Shift + Power
 Zone 2	 Media
 Mute	 Mute
 Cable/SAT	 Shift + 1
 STB	 Shift + 2
 TV	 Shift + 3
 Disc	 Shift + 4
 MHL	 Shift + 5
 AUX	 Shift + 6
 Audio	 Shift + Dual
 Game	 Shift + 8
 AVR	 Shift + 9
 USB	 Shift + Guide
 Network	 Shift + 0
 Radio	 Shift + Pre Ch
 Surr MOde	 Dual

Original	Recharge
 OSD Menu	 Menu
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Back/Exit	 Back
 Home	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9





Original	Rechange	Original	Rechange
	0		0
	Clear		Exit
	Test		Text
	Vol+		Vol +
	Vol-		Vol -
	Delay		Options
	Info/Option		Info
	Sleep		Sleep
	DIM		List
	CH/Tuner Up		Ch +
	CH/Tuner Down		Ch -
	P-Scan/Top		D. Menu
	Direct		TV/R
	Mem		Rec
	RDS/*		Subt
	I<		I<<
	<<		<<

Original	Rechange	Original	Rechange
	>>		>>
	>		>>
	Stop		Stop
	Play		Play
	Pause		Pause
	PrevCH		Pre Ch

