



Original	Recharge
Power On	Power
Power Off	Shift + Power
Mute	Mute
Stereo	Shift + Dual
Cable/Sat	Green
TV	Blue
CD	Yellow
Menu	Menu
Harman Volume	Smart
Exit	Exit
Tone Control	Back
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok
1	1

Original	Recharge
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Clear	Shift + Exit
Direct	Guide
Vol+	Vol +
Vol-	Vol -
CH/Tuner Up	Ch +
CH/Tuner Down	Ch -
Speaker 1	Options
Speaker 2	Dual





Original	Recharge
Sleep	Sleep
Dim	TV/R
P.Scan	Text
A.Preset	AV
MEM	Format
RDS	Subt
Prev.CH	Pre Ch
I<	I<<
<<	<<
>>	>>
>I	>>I
Stop	Stop
Play	Play
Pause	Pause
Phono	Shift + 1
FM/AM	Shift + 2
USB	Shift + 3

Original	Recharge
Bluetooth	Shift + 4
vTuner	Shift + 5
Network	Shift + 6
AUX	Shift + 7
Digital	Shift + 8





Original	Recharge
Power On	Power
Power Off	Shift + Power
Left	Left
Right	Right
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Vol+ Stereo	Vol +
Vol- Stereo	Vol -
Stereo	Dual

Original	Recharge
Cable/Sat	Green
CD	Yellow
TV	Blue
Mute	Mute





Original	Recharge
Power On	Power
Power Off	Shift + Power
Mute	Mute
Stereo	Shift + Dual
Cable/SAT	Green
TV	Blue
CD	Yellow
Menu	Menu
Harman Volume	Smart
Exit	Exit
Tone Control	Back
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok
1	1

Original	Recharge
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Clear	Shift + Exit
Direct	Guide
Vol+ Stereo	Vol +
Vol- Stereo	Vol -
CH/Tuner Down	Ch +
CH/Tuner Up	Ch -
Speaker 1	Options
Speaker 2	Dual





Original		Recharge		Original		Recharge	
	Sleep		Sleep				
	DIM		TV/R				
	P.Scan		Text				
	A.Preset		AV				
	MEM		Format				
	RDS		Subt				
	Prev.CH		Pre Ch				
	I<		I<<				
	<<		<<				
	>>		>>				
	>I		>>I				
	Stop		Stop				
	Play		Play				
	Pause		Pause				

