





 
 
 

 
 

 







 

 

 

 

 






 



 

 












Original	Recharge	Original	Recharge
 VHS/DVD Power	 Power	 Create Chapter	 TV/R
 Direct TV Rec	 Subt	 I<< Skip	 I<<
 VHS/DVD	 Smart	 Skip >>I	 >>I
 1	 1	 REW / << Slow/Search	 <<
 2	 2	 FF / Slow/Search	 >>
 3	 3	 Stop	 Stop
 4	 4	 Pause	 Pause
 5	 5	 Play	 Play
 6	 6	 Direct Navigator / Top Menu	 D. Menu
 7	 7	 Functions	 List
 8	 8	 Up	 Up
 9	 9	 Left	 Left
 0	 0	 Enter	 Ok
 Cancel / Reset	 Exit	 Right	 Right
 Input Select	 Guide	 Down	 Down
 CH+ / Tracking/V-Lock+	 Ch +	 Sub Menu	 Menu
CH- / Tracking/V-Lock-	Ch -	Return	Back

Original	Recharge	Original	Recharge
 Power	 Power	 Create Chapter	 TV/R
 Direct TV Rec	 Subt	 I<< Skip	 I<<
 VHS/DVD	 Smart	 Skip >>I	 >>I
 1	 1	 REW / << Slow/Search	 <<
 2	 2	 FF / Slow/Search	 >>
 3	 3	 Stop	 Stop
 4	 4	 Pause	 Pause
 5	 5	 Play	 Play
6	6	Direct Navigator / Top Menu	D. Menu
7	7	Functions	List
8	8	Up	Up
9	9	Left	Left
0	0	Enter	Ok
Cancel / Reset	Exit	Right	Right
Input Select	Guide	Down	Down
CH+ / Tracking/V-Lock+	Ch +	Sub Menu	Menu
CH- / Tracking/V-Lock-	Ch -	Return	Back



 
 

 
 
 










 








 






 









 



 

 

 
 
 
 
 









	Original	Recharge	
	VHS/DVD Power		Power
	Direct TV Rec		Subt
	VHS/DVD		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Cancel / Reset		Exit
	Input Select		AV
	CH+ / Tracking/V-Lock+		Ch +
	CH- / Tracking/V-Lock-		Ch -

	Original	Recharge	
	ShowView		Media
	I<< Index		I<<
	Index >>I		>>I
	REW		<<
	FF		>>
	Stop		Stop
	Pause		Pause
	Play		Play
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Return		Back
	Prog/Check		Sleep
	Display		Info
	Jet Rew		Shift + <<



