


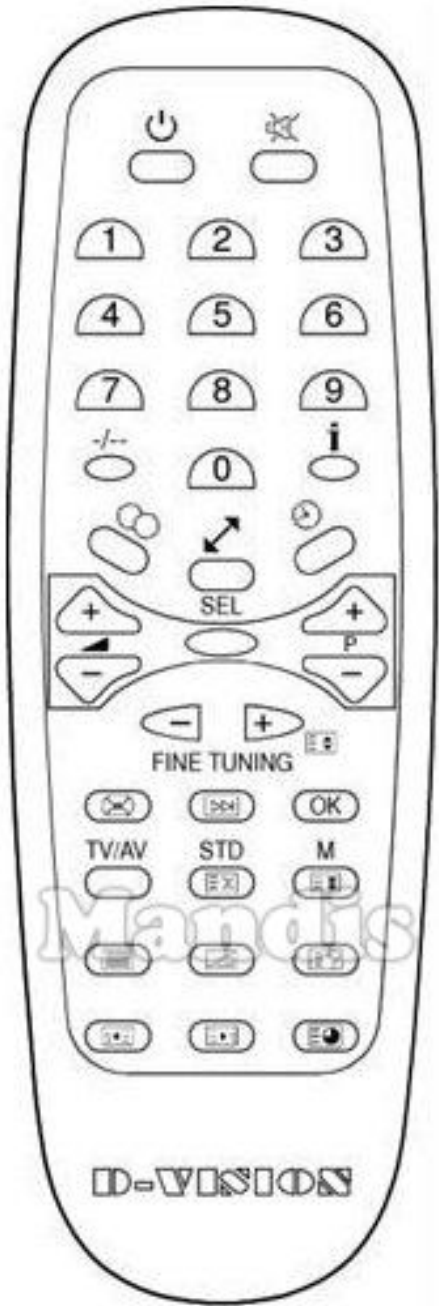





Original		Rechange		Original		Rechange	
	Power		Power		Vol+		Vol +
	Mute		Mute		Vol-		Vol -
	1		1		P+		Ch +
	2		2		P-		Ch -
	3		3		(X)		Exit
	4		4	>>I icon"/>	>>I	>>I icon"/>	>>I
	5		5		OK		Ok
	6		6		SEL		Menu
	7		7		Fine Tuing+		Right
	8		8		Fine Tuing-		Left
	9		9		TV/AV		AV
	0		0		STD / [=X]		Smart
	-/-		Guide		M		Media
	i		Info		Text		Text
	OO		Dual		[ / = ]		D. Menu
	Format		Format		Reveal		TV/R
	⊖ Sleep		3D		[ 1 < = ]		<<





	Original	Recharge	Original	Recharge
	[≡>1]		>>	
	[≡0]		Options	

