 

 



 

 


 


 



 





 

 

 













 

















 
 























Original	Rechange	Original	Rechange
 Power	 Power	 Left	 Left
 Mute	 Mute / Dimmer	 Check	 OK
 Play/Pause	 Play / Slow	 Right	 Right
 Stop	 Stop / Hold	 Clear	 Exit / Cancel / Clear
 I<<	 I<< / Preset-	 Down	 Down
 >>I	 >>I / Preset+	 Volume Control +	 Vol+
 EQ.Effect	 Sound / Title	 M.Call	 Smart / List
 S.W.Effect	 Audio / Lang I/II	 P.Call Up	 CH+ / Page+
 P.Open/Close	 Eject / Surround	 Volume Control -	 Vol-
 P.Mode	 Picture / Format	 Display	 Display / Media
 Sleep	 Sleep / Timer	 P.Call Down	 CH- / Page-
 Tuner Band	 TV/Radio /	 1	 1
 Presence	 D.Menu / Top	 2	 2
 AI/Loudness	 Setup / OPT /	 3	 3
 AI/Auto/Focus/GE	 Text / Goto	 4	 4
 LD/AUX	 AV / Input / RDS	 5	 5
 Up	 Up	 6	 6





Original	Recharge
7	 7
8	 8
9	 9
+10	 Guide / EPG / -/--
0	 0
Edit	 Fav / Marker / PC
Repeat	 Green / APP / Repeat
S.W.Power	 +  Shift + Power
Off	 +  Shift + Mute / Dimmer
S.W.Vol+	 +  Shift + Vol+
P	 +  Shift + Smart / List
S.W.Vol-	 +  Shift + Vol-
Changer CD 1	 +  Shift + 1
Changer CD 2	 +  Shift + 2
CD	 +  Shift + 3
Changer CD 4	 +  Shift + 4
Tape	 +  Shift + 5

 





Original	Recharge
Tuner	 +  Shift + 6
Changer CD 3	 +  Shift + 7
Changer CD 5	 +  Shift + 8
Changer CD 6	 +  Shift + 9





Original		Recharge	
	Power		Power
	Mute		Mute / Dimmer
	Pause Tape B		Pause / Step / Freeze
	Stop Tape A		Stop / Hold
	Rec Tape B		Rec / Rec Mode
	< Tape A		<< / Tune-
	> Tape A		>> / Tune+
	I<< Tape A		I<< / Preset-
	>> Tape A		>>I / Preset+
	LD/AUX		AV / Input / RDS
	Volume Control +		Vol+
	Volume Control -		Vol-
	CD		3
	Tape		5
	Tuner		6
	Stop Tape B		Shift + Stop /
	< Tape B		Shift + << /

Tune-

Original		Recharge	
	> Tape B		Shift + >> /
	I<< Tape B		Shift + I<< / Preset-
	>> Tape B		Shift + >>I / Preset+

