





 

 

 

 









 
 









Original	Rechange
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 ✓	 Guide / EPG / -/--
 0	 0
 Red / <<<	 Red / Netflix / Search
 Red / <<<	 <<< / Tune-
 Green / Stop	 Green / APP / Repeat
 Green / Stop	 Stop / Hold

Original	Rechange
 Yellow / Play	 Play / Slow
 Yellow / Play	 Yellow / YouTube / Repeat
 Blue / >>>	 >>> / Tune+
 Blue / >>>	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI	 D.Menu / Top
 Exit / Recall	 Back / Return
 Exit / Recall	 Exit / Cancel / Clear
 Info	 Info / Angle
 Prog +	 CH+ / Page+
 TV / Radio	 TV/Radio /
 Vol +	 Vol+
 Prog -	 CH- / Page-





Original	Recharge	Original	Recharge
 MENU	Menu	 HOME MENU	Menu / Home
 Vol -	Vol -	 VOL	Vol-
 TV/SAT	TV/SAT	 LIST SMART	Smart / List
 TXT	TXT	 GOTO TEXT	Text / Goto
 STOP	Stop	 STEP-FREEZE	Pause / Step / Freeze
 EXT	EXT	 MEDIA DISPLAY	Display / Media
 SAT1 + OK	Shift + 2	 SHIFT + DVD 2	Shift + 2
 SAT2 + OK	Shift + 3	 SHIFT + CD-STB 3	Shift + 3
 TV + OK	Shift + 1	 SHIFT + TV 1	Shift + 1
 PIP	Picture / Format	 FORMAT PICTURE	Picture / Format







Original	Recharge
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 ✓	 Guide / EPG / -/--
 0	 0
 A/B	 Shift + Yellow / YouTube /
 Red / <<<	 <<< / Tune-
 Red / <<<	 Red / Netflix / Search
 Green / Stop	 Green / APP / Repeat

Original	Recharge
 Green / Stop	 Stop / Hold
 Yellow / Play	 Play / Slow
 Yellow / Play	 Yellow / YouTube / Repeat
 Blue / >>>	 >>> / Tune+
 Blue / >>>	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI	 D.Menu / Top
 Exit / Recall	 Exit / Cancel / Clear
 Exit / Recall	 Back / Return
 Info	 Info / Angle
 Prog +	 CH+ / Page+
 TV / Radio	 TV/Radio /
 Vol +	 Vol+









Original	Rechange
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 ✓	 Guide / EPG / -/--
 0	 0
 A/B	 Shift + Yellow / YouTube /
 Red / <<	 Red / Netflix / Search
 Red / <<	 << / Tune-
 Green / Stop	 Stop / Hold

Original	Rechange
 Green / Stop	 Green / APP / Repeat
 Yellow / Play	 Play / Slow
 Yellow / Play	 Yellow / YouTube / Repeat
 Blue / >>	 >> / Tune+
 Blue / >>	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI	 D.Menu / Top
 Exit / Recall	 Back / Return
 Exit / Recall	 Exit / Cancel / Clear
 Info	 Info / Angle
 Prog +	 CH+ / Page+
 TV / Radio	 TV/Radio /
 Vol +	 Vol+



