
 



 







 
 
 





Original		Rechange		Original		Rechange	
	Power		Power		Blue / SMode		Shift + Dual
	Mute		Mute		Blue / SMode		Shift + Blue
	Exit		Exit		Up		Up
	Text		Text		Left		Left
	Audio I/II		Dual		Enter		Ok
	Display		Info		Right		Right
	Sleep		Sleep		Down		Down
	P+		Ch +		1		1
	P-		Ch -		2		2
	V+		Vol +		3		3
	V-		Vol -		4		4
	Red / Source		AV		5		5
	Red / Source		Shift + Red		6		6
	Green / TV		Menu		7		7
	Green / TV		Shift + Green		8		8
	Yellow / PMode		Format		9		9
	Yellow / PMode		Shift + Yellow		0		0





Original	Recharge	Original	Recharge
	-/--		Stop / FAV -
	Recall		<< / FAV
	Red		<< / FAV
	Green		>> / FAV+
	Yellow		>> / FAV+
	Blue / Repeat		EPG
	Blue / Repeat		USB/SD
	Subtitle		Recorder
	Pause/Play / Hold		CH.List
	Pause/Play / Hold		TV / Radio
	Size		
	Mix		
	Reveal		
	TXT Index		
	I<< / Subpage		
	>>I / Lang		
	Stop / FAV -		

