




 





 














Original	Rechange	Original	Rechange
 Power	 Power	 Blue / SMode	 Shift + Dual
 Mute	 Mute	 Blue / SMode	 Shift + Blue
 Exit	 Exit	 Up	 Up
 Text	 Text	 Left	 Left
 Audio I/II	 Dual	 Enter	 Ok
 Display	 Info	 Right	 Right
 Sleep	 Sleep	 Down	 Down
 P+	 Ch +	 1	 1
 P-	 Ch -	 2	 2
 V+	 Vol +	 3	 3
 V-	 Vol -	 4	 4
 Red / Source	 AV	 5	 5
 Red / Source	 Shift + Red	 6	 6
 Green / TV	 Menu	 7	 7
 Green / TV	 Shift + Green	 8	 8
 Yellow / PMode	 Format	 9	 9
 Yellow / PMode	 Shift + Yellow	 0	 0





Original	Recharge	Original	Recharge
	Shift +		Shift +
			Shift +
	Shift +		
	Shift +		

