

 






 



 
 
 

 
 
 


 


 


 

























 

 






	Original	Rechange	Original	Rechange
	Standby			Pause
	Info			TV/R
	Mute			Pre Ch
	P.Mode			AV
	S.Mode			Back
	Zoom			List
	Sleep			Up
	1			Left
	2			Ok
	3			Right
	4			Down
	5			Vol +
	6			Vol -
	7			Ch +
	8			Ch -
	9			Menu
	0			Guide





Original	Recharge
 EPG / DVD	 D. Menu
 Audio	 Shift + Dual
 Exit / DVD Setup	 Exit
 Exit / DVD Setup	 Options
 TXT	 Text
 Index / Angle	 Smart
 Size	 3D
 Subtitle	 Subt
 Mix / Open/Close	 Shift + Text
 Mix / Open/Close	 Eject
 Play/Pause /	 Play
 Stop / Hold	 Stop
 A-B / Subpage	 Media
 << / Red	 Red
 << / Red	 <<
 >> / Green	 >>
 >> / Green	 Green

Original	Recharge
 I<< / Yellow	 I<<
 I<< / Yellow	 Yellow
 >>I / Blue	 >>I
 >>I / Blue	 Blue

