



Original		Rechange		Original		Rechange	
	Standby		Power		Prog-		Ch -
	Open/Close		Eject		Timer Prog		Sleep
	Input Select		AV		Variable Replay		Pre Ch
	HDMI		TV/R		Variable Skip		Shift + Pre Ch
	1		1		Top Menu		Menu
	2		2		Disc Menu		D. Menu
	3		3		Up		Up
	4		4		Left		Left
	5		5		Enter		Ok
	6		6		Right		Right
	7		7		Down		Down
	8		8		Display		Info
	9		9		Return		Shift + Back
	0		0		Mode		Yellow
	Setup		Options		Search		Blue
	Clear		Exit		<<		<<
	Prog+		Ch +		Play		Play





	Original	Rechange	Original	Rechange
	>>	 >>		
	I<<	 I<<		
	Stop	 Stop		
	>>I	 >>I		
	Pause	 Pause		
	VCR	 +  Shift + 1		
	HDD	 +  Shift + 2		
	DVD	 +  Shift + 3		
	Time Slip	 +  Shift + Sleep		
	Dubbing	 Back		
	Rec Mode	 +  Shift + Rec		
	Rec	 Rec		
	Subtitle	 Subt		
	1.3x/0.8x PPlay	 Format		
	O))/Audio	 Dual		
	Sat Link	 3D		

