
 




 






 



 






 
 

 








Original		Rechange		Original		Rechange	
	Power		Power		0		0
	Audio Monitor		Dual		-/--		Guide
	Format		Format		Input Select		AV
	Eject		Eject		Vol+		Vol +
	[i+]		Info		Vol-		Vol -
	Counter / Remain		Media		Prog+		Ch +
	Clear		Exit		Prog-		Ch -
	TV / Video		TV/R		Slow		Shift + <<
	1		1		x2		Shift + >>
	2		2		I<<		I<<
	3		3		>>I		>>I
	4		4		Rec		Rec
	5		5		SP / LP		Smart
	6		6		Menu		Menu
	7		7		Timer		Shift + AV
	8		8		Up		Up
	9		9		Pause		Pause














 


 



 

 


 

 

 



 



 



 

 

 





 















 






Original		Rechange		Original		Rechange	
	Left		Left				
	<<		<<				
	OK		Ok				
	Play		Play				
	Right		Right				
	>>		>>				
	Down		Down				
	Stop		Stop				





Original	Recharge	Original	Recharge
 Power	 Power	 -/--	 Guide
 Display	 Info	 Vol+	 Vol +
 Format	 Format	 Vol-	 Vol -
 Audio Monitor	 Dual	 Prog+	 Ch +
 TV / Video	 Smart	 Prog-	 Ch -
 1	 1	 Red	 Red
 2	 2	 Green	 Green
 3	 3	 Yellow	 Yellow
 4	 4	 Blue	 Blue
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 [=]	 Text		
 [ ]	 TV/R		

Original	Recharge	Original	Recharge
 -/--	 Guide	 Vol+	 Vol +
 Vol-	 Vol -	 Prog+	 Ch +
 Prog-	 Ch -	 Red	 Red
 Green	 Green	 Yellow	 Yellow
 Blue	 Blue		

