


 
 
 

 
 
 

 
 
 

 

 

 

 

 























 







 










 






 





















 




Original		Rechange		Original		Rechange	
	Power		Power		C		Pre Ch
	Mute		Mute		[*]		TV/R
	[ ]		Smart		[↔*]		Subt
	[≡]		Text		[↑*]		List
	Input		AV		[↑]		Options
	Output		Media		Red		Red
	1		1		Green		Green
	2		2		Yellow		Yellow
	3		3		Blue		Blue
	4		4		[≡+]		3D
	5		5		[+]		Info
	6		6		SAT		Back
	7		7		Prog+		Ch +
	8		8		Prog-		Ch -
	9		9		Vol+		Vol +
	0		0		Vol-		Vol -
	-/--		Guide		Picture		Format












 



 

 




Original		Rechange		Original		Rechange	
	♪		Dual				
	←		Left				
	Up/+		Up				
	Down/-		Down				
	Menu		Menu				
	OK		Ok				
	Power MDP		Shift + Power				
	>> MDT		>>				
	Play MDT		Play				
	<< MDT		<<				
	Stop MDT		Stop				
	Pause MDT		Pause				
	Prog+ MDT		Shift + Ch +				
	Prog- MDT		Shift + Ch -				





	Original	Rechange	Original	Rechange
	Power			
	Prog+			
	Prog-			
	>>			
	Play			
	<<			
	Stop			
	Pause			
	Rec			










 

 

 
 
 

 




Original	Recharge	Original	Recharge
Power	Power		
Prog+	Ch +		
Prog-	Ch -		
>>	>>		
Play	Play		
<<	<<		
Stop	Stop		
Pause	Pause		
Rec	Rec		





Original		Recharge		Original		Recharge	
	Power		Power				
	Prog+		Ch +				
	Prog-		Ch -				
	>>		>>				
	Play		Play				
	<<		<<				
	Stop		Stop				
	Pause		Pause				
	Rec		Rec				

