







 



 

 

 

 

 

 



 




 
 

 

 

 

 











Original		Rechange		Original		Rechange	
	Power		Power		Gamma		CH- / Page-
	Source		AV / Input / RDS		Sharp		Vol+
	AcuM		D.Menu / Top		Hide		Exit / Cancel / Clear
	HDR		Display / Media		Cont		Vol-
	Mode		Smart / List		Ratio		Picture / Format
	Up		Up		Super Res		Zoom / Size
	Left		Left		3D		3
	Enter		OK				
	Right		Right				
	Down		Down				
	Back		Back / Return				
	Menu		Menu / Home				
	Info		Info / Angle				
	VGA		4				
	HDMI/MHL		0				
	Freeze		Pause / Step / Freeze				
	Bright		CH+ / Page+				

