



 



 

 

 

 

 

 

 

 
 

 

 



 






Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Lang	 Dual
 [=]..	 Subt
 V+	 Vol +
 V-	 Vol -
 Mute	 Mute
 Smart	 Smart

Original	Rechange
 P+	 Ch +
 P-	 Ch -
 Home	 Shift + Smart
 Guide	 Guide
 i	 Info
 Exit	 Exit
 ←	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Netflix	 Media
 YouTube	 List
 prime video	 Options
 Google Play	 TV/R
 Menu	 Menu





Original	Recharge	Original	Recharge
 Source	 AV		
 <<	 <<		
 Stop	 Stop		
 >>	 >>		
 Rec	 Rec		
 Pause	 Pause		
 Play	 Play		
 Text	 Text		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

