 


 
 


 

 

 

 

 



 

 
 
 
 
 
 
 
 

 
 


 
 



 

 

 
 

 



 
 
 


 



 

 

 



 




Original		Rechange		Original		Rechange	
	On		Power		Vol-		Vol -
	Standby		Shift + Power		Return		Back
	Sleep		Sleep		Setup		Options
	< Input Selector		Shift + Left		Dimmer		9
	Input Selector >		Shift + Right		Muting		Mute
	SURR		3		I<<		I<<
	Stereo		1		Play		Play
	Direct		2		>>I		>>I
	A.ST		4		<<		<<
	Preset+		Ch +		Stop		Stop
	Preset-		Ch -		>>		>>
	Up		Up		Rec		Rec
	Left		Left		Pause / Play Rev.		Pause
	Enter		Ok		Open / Close		Eject
	Right		Right		Audio		Dual
	Down		Down		Display		Info
	Vol+		Vol +		SW Mode		Red

 


 





 
 








 


 
 







 



 


 



 



 
 


 


 
 


 







 
 
 




Original	Rechange	Original	Rechange
 TEST TONE	Test Tone	 TOP MENU	Menu
	DSP ►		8
 LATE NIGHT	Late Night	 DISC NAV	List
	Distance		Yellow
	◀ DSP		7
 SP A	SP A		5
 CH SEL	CH Sel	 E-MANUAL	D. Menu
 UP/DOWN	Level Up	 HOME	Smart
 SP B	SP B		6
 T-D SETUP	T-D Setup		Green
 UP/DOWN	Level Down	 APP	Media





Original	Rechange	Original	Rechange
 ON	 Power	 >>I	 >>I
 STDBY	 Shift + Power	 <<	 <<
 Menu	 Menu	 Stop	 Stop
 Disc+	 Ch +	 >>	 >>
 Disc-	 Ch -	 Pause	 Pause
 Up	 Up	 Open / Close	 Eject
 Left	 Left	 Random	 Text
 Enter	 Ok	 Subtitle	 Subt
 Right	 Right	 Angle	 Format
 Down	 Down	 1	 1
 Vol+	 Vol +	 2	 2
 Vol-	 Vol -	 3	 3
 Return	 Back	 4	 4
 Setup	 Options	 5	 5
 Muting	 Mute	 6	 6
 I<<	 I<<	 7	 7
 Play	 Play	 8	 8





	Original	Rechange	Original	Rechange
	9			
	0			
	+10			
	Search			

