






 








 

 
 
 



 

 
 



 
 


 




 
 


 
 



 


 
 

 
 


 



 




Original		Rechange		Original		Rechange	
	Power		Power		Stop		Stop
	Mute		Mute		1		1
	TV		TV/R		2		2
	Input		AV		3		3
	I/II		Dual		4		4
	List		List		5		5
	Menu		Menu		6		6
	Q.View		Options		7		7
	Up		Up		8		8
	Down		Down		9		9
	Right		Right		0		0
	Left		Left		SSM		Guide
	OK		Ok		PSM		Pre Ch
	PR+		Ch +		Sleep		Sleep
	PR-		Ch -		[≡]/Text		Text
	Vol+		Vol +		*		Smart
	Vol-		Vol -		Blue		Blue





Original	Recharge
 Yellow	 Yellow
 Green	 Green
 Red	 Red
 [=x]/Update	 Subt
 [=o]/Time	 Eject
 [=◇]/Size	 Format
 [=?]/Reveal	 3D
 [=+]/Hold	 Back
 [=i]/Index	 Info
 [=M]/Mode	 Media
 [=]/Mix	 D. Menu

Original	Recharge

