



Original	Rechange
Power	Power
Marker	Smart
Open/Close	Eject
Search	TV/R
Audio	Dual
Subtitle	Subt
Angle	Red
Random	Media
Program	Sleep
Clear	Exit
1	1
2	2
3	3
4	4
5	5
6	6
7	7

Original	Rechange
8	8
9	9
0	0
I<<	I<<
Play	Play
I>>	I>>
Zoom	Shift + Eject
Stop	Stop
Pause/Step	Pause
Display	Info
<I Slow	<<
Slow I>	>>
Select/Enter	Ok
Up	Up
Down	Down
Right	Right
Left	Left



