









 



 












Original	Rechange
	Power
	Mute / Dimmer
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	Rec / Rec Mode
	<< / Tune-
	>> / Tune+
	Sound / Title
	Audio / Lang I/II
	Subtitle / EQ
	Picture / Format
	Sleep / Timer
	Text / Goto
	AV / Input / RDS
	Menu / Home
	Up

Original	Rechange
	Info / Angle
	Left
	OK
	Right
	Down
	Back / Return
	Vol+
	Smart / List
	CH+ / Page+
	Vol-
	Display / Media
	CH- / Page-
	1
	2
	3
	4
	5





Original	Recharge	Original	Recharge
	6		6
	7		7
	8		8
	9		9
	Guide		Guide / EPG / -/--
	0		0
	Recall		Fav / Marker / PC
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Ratio		Shift + Picture / Format
	TV		Shift + 1

