



| Original   | Rechange  | Original   | Rechange   |
|--|---|--|--|
|  Power  |  Power   |  Up/CH+   |  Up     |
|  Red    |  Red     |  Down/CH- |  Down   |
|  Green  |  Green   |  Right    |  Right  |
|  Yellow |  Yellow  |  Left     |  Left   |
|  Blue   |  Blue    |  OK       |  Ok     |
|  TV/SAT |  Smart   |  Vol+     |  Vol +  |
|  TV/♪   |  TV/R    |  Vol-     |  Vol -  |
|  Zoom   |  Eject   |  Recall   |  Back   |
|  Pause  |  Pause   |  FAV      |  Pre Ch |
|  Audio  |  Dual    |  P+       |  Ch +   |
|  EPG   |  Guide  |  P-      |  Ch -  |
|  SubT |  Subt  |  1      |  1    |
|  Text |  Text  |  2      |  2    |
|  Exit |  Exit  |  3      |  3    |
|  Menu |  Menu  |  4      |  4    |
|  M/P  |  Media |  5      |  5    |
|  Mute |  Mute  |  6      |  6    |



