




Original	Recharge
 Power	 Power
 [i+]/Timer	 Info / Angle
 [i+]/Timer	 Sleep / Timer
 Input 1	 Shift + 1
 Input 2	 Shift + 2
 Input 3	 Shift + 3
 Input 4	 Shift + 4
 PC	 Shift + Fav / Marker / PC
 Screen Split	 Shift + Red / Netflix /
 Screen Swap	 Shift + Green / APP /
 PIP Swap	 Shift + Yellow / YouTube /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Original	Recharge
 7	 7
 8	 8
 9	 9
 CH Return	 Guide / EPG / -/--
 0	 0
 CH Enter	 Fav / Marker / PC
 P+	 CH+ / Page+
 I-II	 Audio / Lang I/II
 Vol+	 Vol+
 P-	 CH- / Page-
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Return	 Back / Return
 Up	 Up
 Home Menu	 Menu / Home
 Left	 Left
 Enter	 OK





Original		Recharge		Original		Recharge	
	Right		Right				
	Down		Down				
	AV Selection		AV / Input / RDS				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	[ I+ ]/[ I- ]		Setup / OPT /				
	[ <> ]		Picture / Format				
	[ ... ]		Subtitle / EQ				
	[ ≡ ? ]		D.Menu / Top				
	[ ≡ i ]		Display / Media				
	[ ≡ ]		Text / Goto				

