



Original	Recharge	Original	Recharge
 Power	 Power	 Internet Radio	 Media
 Sleep	 Sleep	 Eco	 3D
 CBL/SAT	 1	 CH/Page+	 Ch +
 DVD	 2	 CH/Page-	 Ch -
 Blu-ray	 3	 Vol+	 Vol +
 Game	 4	 Vol-	 Vol -
 AUX	 5	 Mute	 Mute
 Media Player	 6	 Info	 Info
 Tv Audio	 7	 Option	 Options
 BK	 8	 Back	 Back
 Tuner	 9	 Setup	 Menu
 USB	 Guide	 Up	 Up
 Play	 Play	 Down	 Down
 CD	 0	 Right	 Right
 Bluetooth	 Pre Ch	 Left	 Left
 Phono	 Dual	 Enter	 Ok
	Smart	>> /Tune+	>>






Original		Rechange		Original	Rechange
	I<</Tune-		I<<		
	Pause		Pause		
	Quick Select 1		D. Menu		
	Quick Select 2		Text		
	Quick Select 3		Eject		
	Quick Select 4		AV		
	Green/Movie		Green		
	Red/Music		Red		
	Blue/Game		Blue		
	Yellow/Pure		Yellow		





Original		Recharge		Original		Recharge	
	Power		Power		CH/Page+		Ch +
	Sleep		Sleep		CH/Page-		Ch -
	CBL/SAT		1		Vol+		Vol +
	DVD		2		Vol-		Vol -
	Blu-ray		3		Mute		Mute
	Game		4		Back		Back
	AUX		5		Up		Up
	Media Player		6		Down		Down
	Tv Audio		7		Right		Right
	BK		8		Left		Left
	Tuner		9		Enter		Ok
	USB		Guide		Play		Play
	CD		0		>>I/Tune+		>>I
	Bluetooth		Pre Ch		I<</Tune-		I<<
	Phono		Dual		Pause		Pause
	Internet Radio		Smart		Quick Select 1		D. Menu
			Media		Quick Select 2		Text





Original		Recharge		Original		Recharge	
	Quick Select 3		Eject				
	Quick Select 4		AV				

