



 















 


 
 















 
 

 




 


 



 
 









































| Original | | Rechange | | Original | | Rechange | |
|---|-------|---|---------------------------|---|---------------|---|-----------------------------|
|  | TV/R |  | TV/Radio / |  | RECALL |  | Back / Return |
|  | POWER |  | Power |  | 0 |  | 0 |
|  | MUTE |  | Mute / Dimmer |  | FAV 2 |  | Shift + Fav / Marker / PC |
|  | SLEEP |  | Sleep / Timer |  | FAV 1 |  | Fav / Marker / PC |
|  | 1 |  | 1 |  | MENU |  | Menu / Home |
|  | 2 |  | 2 |  | EXIT |  | Exit / Cancel / Clear |
|  | 3 |  | 3 |  | Up / CH + |  | Up |
|  | SUB |  | Subtitle / EQ |  | Left / VOL - |  | Left |
|  | 4 |  | 4 |  | OK |  | OK |
|  | 5 |  | 5 |  | Right / VOL + |  | Right |
|  | 6 |  | 6 |  | Down / CH - |  | Down |
|  | EPG 2 |  | Shift + Guide / EPG / -/- |  | Red / Audio |  | Red / Netflix / Search |
|  | EPG 1 |  | Guide / EPG / -/- |  | Red / Audio |  | Audio / Lang I/II |
|  | 7 |  | 7 |  | Blue / Info |  | Info / Angle |
|  | 8 |  | 8 |  | Blue / Info |  | Blue / Prime Video / Random |
|  | 9 |  | 9 |  | GREEN/PAUSE |  | Green / APP / Repeat |
|  | TXT |  | Text / Goto |  | Yellow / Zoom |  | Zoom / Size |





| Original | Recharge | Original | Recharge |
|---|---|----------|----------|
|  Yellow / Zoom |  Yellow / YouTube / Repeat | | |
|  VOL+ |  Vol+ | | |
|  Page+ |  CH+ / Page+ | | |
|  VOL- |  Vol- | | |
|  Page- |  CH- / Page- | | |
|  << |  << / Tune- | | |
|  >> |  >> / Tune+ | | |
|  PLAY |  Play / Slow | | |
|  STOP |  Stop / Hold | | |
|  I<< |  I<< / Preset- | | |
|  >>I |  >>I / Preset+ | | |
|  PAUSE |  Pause / Step / Freeze | | |
|  REC |  Rec / Rec Mode | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

