






 


 
 




 

 






 




	Original	Rechange		Rechange
	Timer	 AV		AV
	Timer			Up
	Timer			Sleep
	1			1
	1			Left
	1			Power
	0			0
	0			Ok
	0			Shift + Power
	↻ Swing			Smart
	↻ Swing			Right
	~			Media
	~			Down

	Original	Rechange		Rechange

