



Original		Rechange		Original		Rechange	
	Power		Power		Home		Smart
	Volume+		Vol +		Stop		Stop
	Volume-		Vol -		Pause		Pause
	Mute		Mute		Play		Play
	Sleep		Sleep		I<</Tune-		I<<
	Eco		3D		>>/Tune+		>>I
	CH/Page+		Ch +		<<		<<
	CH/Page-		Ch -		>>		>>
	Info		Info		Smart Select 1		D. Menu
	Option		Options		Smart Select 2		Text
	Back		Back		Smart Select 3		Eject
	Setup		Menu		Smart Select 4		AV
	Up		Up		Green/Movie		Green
	Down		Down		Red/Music		Red
	Right		Right		Blue/Game		Blue
	Left		Left		Yellow/Pure		Yellow
	Enter		Ok		1		1




 





 


 


Original	Recharge
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
CBL/SAT	SHIFT + 1 Shift + 1
DVD	SHIFT + 2 Shift + 2
Tv Audio	SOUND DUAL Dual
Blu-ray	SHIFT + 3 Shift + 3
AUX	SHIFT + 4 Shift + 4
Tuner	SHIFT + 5 Shift + 5
Bluetooth	SHIFT + 6 Shift + 6
Game	SHIFT + 7 Shift + 7

Original	Recharge
8K	SHIFT + 8 Shift + 8
Phono	SHIFT + 9 Shift + 9
USB	SHIFT + GUIDE Shift + Guide
Media Player	FAV PRE-CH Pre Ch
CD	GUIDE Guide
..!..	SHIFT + 0 Shift + 0
Internet Radio	SHIFT + FAV PRE-CH Shift + Pre Ch





Original	Rechange	Original	Rechange
 Power	 Power	 >>	 >>
 Volume+	 Vol +	 <<	 <<
 Volume-	 Vol -	 >> Tune+	 >>
 Mute	 Mute	 <</Tune-	 <<
 Sleep	 Sleep	 Smart Select 1	 D. Menu
 CH/Page+	 Ch +	 Smart Select 2	 Text
 CH/Page-	 Ch -	 Smart Select 3	 Eject
 Back	 Back	 Smart Select 4	 AV
 Up	 Up	 1	 1
 Down	 Down	 2	 2
 Right	 Right	 3	 3
 Left	 Left	 4	 4
 Enter	 Ok	 5	 5
 Home	 Smart	 6	 6
 Stop	 Stop	 7	 7
 Pause	 Pause	 8	 8
 Play	 Play	 9	 9





Original	Recharge
0	0
Tv Audio	DUAL
USB	SHIFT + GUIDE
Media Player	FAV PRE-CH
CBL/SAT	SHIFT + 1
DVD	SHIFT + 2
Blu-ray	SHIFT + 3
AUX	SHIFT + 4
Tuner	SHIFT + 5
Bluetooth	SHIFT + 6
Game	SHIFT + 7
8K	SHIFT + 8
Phono	SHIFT + 9
CD	GUIDE
::.	SHIFT + 0
Internet Radio	SHIFT + FAV PRE-CH

Original	Recharge





Original		Rechange		Original		Rechange	
	Power		Power		>>		>>
	Volume+		Vol +		<<		<<
	Volume-		Vol -		>> /Tune+		>>
	Mute		Mute		<</Tune-		<<
	Sleep		Sleep		1		1
	CH/Page+		Ch +		Smart Select 1		D. Menu
	CH/Page-		Ch -		Smart Select 2		Text
	Back		Back		Smart Select 3		Eject
	Up		Up		Smart Select 4		AV
	Down		Down		2		2
	Right		Right		3		3
	Left		Left		4		4
	Enter		Ok		5		5
	Home		Smart		6		6
	Stop		Stop		7		7
	Pause		Pause		8		8
	Play		Play		9		9





Original	Recharge	Original	Recharge
	0		0
	Tv Audio		Dual
	CBL/SAT		Shift + 1
	DVD		Shift + 2
	Blu-ray		Shift + 3
	AUX		Shift + 4
	Tuner		Shift + 5
	Bluetooth		Shift + 6
	Game		Shift + 7
	8K		Shift + 8
	Phono		Shift + 9
	USB		Shift + Guide
	Media Player		Pre Ch
	CD		Guide
	Internet Radio		Shift + 0
			Shift + Pre Ch

Original	Recharge

