



Original	Recharge
Power	Power
Power Tv	Shift + Power
Vol+ Tv	Vol+
CH+ Tv	Shift + CH+ /
AV Input Tv	Shift + AV / Input / RDS
Vol- Tv	Vol-
CH- Tv	Shift + CH- /
1	1
2	2
3	3
Rec	Rec / Rec Mode
4	4
5	5
6	6
Page/CH+	CH+ / Page+
7	7
8	8

Original	Recharge
9	9
Page/CH-	CH- / Page-
Last View	Shift + Back / Return
0	0
Radio/Tv	TV/Radio /
Input Select	AV / Input / RDS
-10s	Fav / Marker / PC
+60s	Shift + Guide / EPG / -/-
Internet	Smart / List
Netflix	Shift + Red / Netflix /
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
I<<	I<< / Preset-
Pause	Pause / Step / Freeze
>>I	>>I / Preset+
Stop	Stop / Hold





Original	Recharge
i/Status	Info / Angle
X/Exit	Exit / Cancel / Clear
Guide	Guide / EPG / /---
Video Menu	D.Menu / Top
Up	Up
Function Menu	Menu / Home
Left	Left
OK	OK
Right	Right
Option	Setup / OPT /
Down	Down
Return	Back / Return
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Audio	Audio / Lang I/II

Original	Recharge
Drive Select	Display / Media
Text	Text / Goto
STTL	Subtitle / EQ

