



Original	Rechange
Power Receiver	Power
Input Select	AV / Input / RDS
DVD / LD	Shift + 2
TV/SAT	Shift + 1
TV/SAT	Shift + 0
DVR/VCR	Shift + 4
CD	Shift + 3
CD-R/Tape	Shift + 5
TUNER	Shift + 6
Standard	Red / Netflix / Search
Advanced	Green / APP / Repeat
Stereo / Direct	Yellow / YouTube / Repeat
Midnight /	Blue / Prime Video / Random
CH. Select	Shift + OK
Level -	Shift + Down
Level +	Shift + Up
Test Tone	Text / Goto

Original	Rechange
Mute	Mute / Dimmer
Effect -	Shift + Left
Effect +	Shift + Right
FL Dimmer	Shift + Mute / Dimmer
Master Volume-	Vol-
Master	Vol+
Top Menu	D.Menu / Top
Up	Up
Menu	Menu / Home
Left	Left
Enter	OK
Right	Right
Audio	Audio / Lang I/II
Down	Down
Sleep	Sleep / Timer
Guide	Shift + Guide / EPG / -/-
<<	<< / Tune-





Original	Rechange
Play	Play / Slow
>>	>> / Tune+
I<<	I<< / Preset-
Pause	Pause / Step / Freeze
Stop	Stop / Hold
>>I	>>I / Preset+
1	1
2	2
3	3
Enter / Disc	Fav / Marker / PC
4	4
5	5
6	6
·/+10	Guide / EPG / -/--
7	7
8	8
9	9

Original	Rechange
0	0
Channel+	CH+ / Page+
Channel-	CH- / Page-
Setup	Setup / OPT /



 

 

 

 















 













 



 



 





Original	Rechange
Power Source	Power
DVDLD	+ Shift + 2
Top Menu	D.Menu / Top
Up	Up
Menu	Menu / Home
Left	Left
Enter	OK
Right	Right
Audio	Audio / Lang I/II
Down	Down
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
I<<	I<< / Preset-
Pause	Pause / Step / Freeze
Stop	Stop / Hold
>>I	>>I / Preset+

Original	Rechange
1	TV 1
2	DVD 2
3	CD - STB 3
Enter / Disc	Fav / Marker / PC
4	4
5	5
6	6
+10	Guide / EPG / -/-
7	7
8	8
9	9
0	0





Original		Rechange		Original		Rechange	
	Power Source		Power		4		4
	Tuner		Shift + 6		5		5
	Tune+		>> / Tune+		6		6
	Tune+		Up		7		7
	Menu		Menu / Home		8		8
	ST-		Left		9		9
	Enter		OK		0		0
	ST+		Right				
	Tune-		<< / Tune-				
	Tune-		Down				
	Display		Display / Media				
	Class		Pause / Step / Freeze				
	MPX		Stop / Hold				
	D.Access		>>I / Preset+				
	1		1				
	2		2				
	3		3				

