
 


 


 
 
 

 

 











Original		Recharge		Original		Recharge	
	Power		Power		Eco		3D
	Sleep		Sleep		Volume Up		Vol +
	CBL/SAT		1		Volume Down		Vol -
	Media Player		2		Mute		Mute
	Blu-ray		3		Info		Info
	Game		4		Option		Options
	AUX1		5		Back		Back
	AUX2		6		Setup		Menu
	Phono		7		Play		Play
	TV Audio		8		Up		Up
	Tuner		9		Down		Down
	USB		Guide		Right		Right
	Bluetooth		0		Left		Left
	Internet Radio		Pre Ch		Enter		Ok
	Micro		Smart		I<</Tune-		I<<
	CH/Page Up		Ch +		Pause		Pause
	CH/Page Down		Ch -		>>I/Tune+		>>I


 





 
 



 
 
 
 


 
 









Original		Rechange		Original		Rechange	
1	Quick Select 1	E-MANUAL D.MENU	D. Menu				
2	Quick Select 2	REPEAT TEXT	Text				
4	Quick Select 4	TIMER AV	AV				
3	Quick Select 3	ZOOM ▲	Eject				
MOVIE	Green/Movie	A	Red				
MUSIC	Red/Music	B	Green				
GAME	Blue/Game	D	Blue				
PURE	Yellow/Pure	C	Yellow				





Original		Rechange		Original		Rechange	
	Power		Power		Volume Up		Vol +
	Sleep		Sleep		Volume Down		Vol -
	CBL/SAT		1		Mute		Mute
	Media Player		2		Up		Up
	Blu-ray		3		Down		Down
	Game		4		Right		Right
	AUX1		5		Left		Left
	AUX2		6		Enter		Ok
	Phono		7		Back		Back
	TV Audio		8		I<</Tune-		I<<
	Tuner		9		Play		Play
	USB		Guide		Pause		Pause
	Bluetooth		0		>>I/Tune+		>>I
	Internet Radio		Pre Ch		Quick Select 1		D. Menu
	Micro		Smart		Quick Select 2		Text
	CH/Page Up		Ch +		Quick Select 3		Eject
	CH/Page Down		Ch -		Quick Select 4		AV

