 













 

 



 

 





 
















Original	Rechange
 Power Receiver	 Power
 DVD	 2
 TV	 1
 VCR	 4
 CD-R	 3
 TUN	 6
 Test Tone	 Display / Media
 Input ATT	 TV/Radio /
 FL Dimmer	 Shift + Mute / Dimmer
 CH Select	 Smart / List
 CH Level-	 CH- / Page-
 CH Level+	 CH+ / Page+
 Effect-	 << / Tune-
 Effect+	 >> / Tune+
 Remote Setup	 Setup / OPT /
 Standard	 Subtitle / EQ
 Adv.Surr.	 Eject / Surround

Original	Rechange
 Stereo	 Audio / Lang I/II
 Input Sel	 AV / Input / RDS
 Signal Select	 Sound / Title
 Midnight / Loudness	 Sleep / Timer
 Mute	 Mute / Dimmer
 Up/Tune+	 Up
 Up/Tune+	 Shift + >> /
 Left/ST-	 Left
 Left/ST-	 Shift + I<< / Preset-
 Enter	 OK
 Right/ST+	 Right
 Right/ST+	 Shift + >>I / Preset+
 Down/Tune-	 Down
 Down/Tune-	 Shift + << /
 Master	 Vol+
 Master Volume-	 Vol-
 TV Vol+	 Shift + Vol+





Original	Rechange	Original	Rechange
Power DVD	Power	Channel+ DVD	CH+ / Page+
1 DVD	1	Channel- DVD	CH- / Page-
2 DVD	2	Up DVD	Up
3 DVD	3	Down DVD	Down
4 DVD	4	Right DVD	Right
5 DVD	5	Left DVD	Left
6 DVD	6	Enter DVD	OK
7 DVD	7	Pause DVD	Pause / Step / Freeze
8 DVD	8	Rec DVD	Rec / Rec Mode
9 DVD	9	Play DVD	Play / Slow
0 DVD	0	<< DVD	<< / Tune-
+10 DVD	Guide / EPG / -/--	>> DVD	>> / Tune+
Menu DVD	Menu / Home	>>I DVD	>>I / Preset+
Top Menu DVD	D.Menu / Top	Stop DVD	Stop / Hold
Master	Vol+	I<< DVD	I<< / Preset-
Master volume-	Vol-	Audio DVD	Audio / Lang I/II
Mute	Mute / Dimmer	Sub Title DVD	Subtitle / EQ

Original	Rechange	Original	Rechange
Power DVD	Power	Channel+ DVD	CH+ / Page+
1 DVD	1	Channel- DVD	CH- / Page-
2 DVD	2	Up DVD	Up
3 DVD	3	Down DVD	Down
4 DVD	4	Right DVD	Right
5 DVD	5	Left DVD	Left
6 DVD	6	Enter DVD	OK
7 DVD	7	Pause DVD	Pause / Step / Freeze
8 DVD	8	Rec DVD	Rec / Rec Mode
9 DVD	9	Play DVD	Play / Slow
0 DVD	0	<< DVD	<< / Tune-
+10 DVD	Guide / EPG / -/--	>> DVD	>> / Tune+
Menu DVD	Menu / Home	>>I DVD	>>I / Preset+
Top Menu DVD	D.Menu / Top	Stop DVD	Stop / Hold
Master	Vol+	I<< DVD	I<< / Preset-
Master volume-	Vol-	Audio DVD	Audio / Lang I/II
Mute	Mute / Dimmer	Sub Title DVD	Subtitle / EQ

























 


























 







 










Original	Rechange
Angle DVD	Info / Angle
Power VCR	Shift + Power
1 VCR	Shift + 1
2 VCR	Shift + 2
3 VCR	Shift + 3
4 VCR	Shift + 4
5 VCR	Shift + 5
6 VCR	Shift + 6
7 VCR	Shift + 7
8 VCR	Shift + 8
9 VCR	Shift + 9
0 VCR	Shift + 0
Disc VCR	Shift + Back / Return
Channel+ VCR	Shift + CH+ /
Channel- VCR	Shift + CH- /
Up VCR	Shift + Up
Down VCR	Shift + Down

Original	Rechange
Right VCR	Shift + Right
Left VCR	Shift + Left
Enter VCR	Shift + OK
Pause VCR	Shift + Pause / Step /
Play VCR	Shift + Play /
Stop VCR	Shift + Stop /
<< VCR	Shift + << /
>>I VCR	Shift + >>I / Preset+
>> VCR	Shift + >> /
I<< VCR	Shift + I<< / Preset-
Rec VCR	Shift + Rec / Rec Mode































 



 




 



 



 









 







Original		Rechange		Original		Rechange	
	Power CD		Power		Channel- CD		CH- / Page-
	1 CD		1		Up CD		Up
	2 CD		2		Down CD		Down
	3 CD		3		Right CD		Right
	4 CD		4		Left CD		Left
	5 CD		5		Enter CD		OK
	6 CD		6		Pause CD		Pause / Step / Freeze
	7 CD		7		Play CD		Play / Slow
	8 CD		8		<< CD		<< / Tune-
	9 CD		9		>> CD		>> / Tune+
	0 CD		0		>>I CD		>>I / Preset+
	+10 CD		Guide / EPG / -/--		I<< CD		I<< / Preset-
	Disc CD		Back / Return		Stop CD		Stop / Hold
	Master		Vol+		Power TVC		Shift + Power
	Master Volume-		Vol-		1 TVC		Shift + 1
	Mute		Mute / Dimmer		2 TVC		Shift + 2
	Channel+ CD		CH+ / Page+		3 TVC		Shift + 3





Original		Rechange		Original		Rechange	
	Power TUN		Power		Left TUN		Left
	1 TUN		1		D.Access TUN		Play / Slow
	2 TUN		2		Band TUN		Smart / List
	3 TUN		3		T.Edit		Pause / Step / Freeze
	4 TUN		4		Class TUN		<< / Tune-
	5 TUN		5		RF ATT TUN		>> / Tune+
	6 TUN		6		MPX TUN		Stop / Hold
	7 TUN		7		Display TUN		Display / Media
	8 TUN		8		Power CDR		Shift + Power
	9 TUN		9		1 CDR		Shift + 1
	0 TUN		0		2 CDR		Shift + 2
	Master		Vol+		3 CDR		Shift + 3
	Master volume-		Vol-		4 CDR		Shift + 4
	Mute		Mute / Dimmer		5 CDR		Shift + 5
	Up TUN		Up		6 CDR		Shift + 6
	Down TUN		Down		7 CDR		Shift + 7
	Right TUN		Right		8 CDR		Shift + 8



