

 


















 







































 






Original	Recharge
 Standby / On	 Power
 Title/Speed	 Shift + Sound / Title
 Mark / Index	 Fav / Marker / PC
 >> / >>>	 >> / Preset+
 << / <<<	 << / Preset-
 TV Mute	 Mute / Dimmer
 Disc Menu	 D.Menu / Top
 Clear	 Exit / Cancel / Clear
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Recharge
 0	 0
 Input Sel.	 AV / Input / RDS
 Display	 Display / Media
 Zoom	 Zoom / Size
 3D Sound	 Sound / Title
 Subtitle	 Subtitle / EQ
 Vol+	 Vol+
 Vol-	 Vol-
 TRK/Prog+	 CH+ / Page+
 TRK/Prog-	 CH- / Page-
 Up	 Up
 Left	 Left
 Setup / Enter	 OK
 Setup / Enter	 Setup / OPT /
 Right	 Right
 Down	 Down
 Return / A.Dub	 Back / Return





	Original	Recharge
	Screen Fit / SVHS	Picture / Format
	TV / VCR	TV/Radio /
	Angle	Info / Angle
	Open / Close	Eject / Surround
	Stop	Stop / Hold
	Play / Pause	Play / Slow
	Play / Pause	Pause / Step / Freeze
	Rec	Rec / Rec Mode
	I<<< / <<<	<<< / Tune-
	>>>I / >>>	>>> / Tune+
	Audio	Audio / Lang I/II
	DVD	Shift + 2
	VCR	Shift + 4
	Mode / Repeat	Green / APP / Repeat

	Original	Recharge

