

 







































 


| Original |        | Rechange   |                           | Original  |            | Rechange  |                       |
|----------|--------|--|---------------------------|---|------------|---|-----------------------|
| A-B      | A-B    |  REPEAT A-B | Yellow / YouTube / Repeat | 7   | 7          | AUX - HDD   | 7                     |
| OPEN     | Open   |             | Eject / Surround          | 8   | 8          | USB   | 8                     |
| REPEAT   | Repeat |  REPEAT     | Green / APP / Repeat      | 9   | 9          | BLUETOOTH   | 9                     |
| PROG     | Prog   |             | TV/Radio /                | 0   | 0          | HDMI - SAT  | 0                     |
| GOTO     | Goto   |             | Text / Goto               |    | Up         |    | Up                    |
| SETUP    | Setup  |             | Setup / OPT /             |    | Down       |    | Down                  |
| OSD      | OSD    |             | Display / Media           |    | Enter      |    | OK                    |
| RETURN   | Return |             | Back / Return             |    | Right      |    | Right                 |
| CLEAR    | Clear  |             | Exit / Cancel / Clear     |    | Left       |    | Left                  |
| MENU     | Menu   |             | Menu / Home               |    | I<<        |    | I<< / Preset-         |
| TITLE    | Title  |            | Sound / Title             |    | <<         |    | << / Tune-            |
| 1        | 1      |           | 1                         |  | Play       |  | Play / Slow           |
| 2        | 2      |           | 2                         |  | >>         |  | >> / Tune+            |
| 3        | 3      |           | 3                         |  | >>I        |  | >>I / Preset+         |
| 4        | 4      |           | 4                         |  | Stop       |  | Stop / Hold           |
| 5        | 5      |           | 5                         |  | Pause/Step |  | Pause / Step / Freeze |
| 6        | 6      |           | 6                         |  | Slow       |  | Shift + Play / Slow   |



