



| Original      | Rechange             |
|---------------|----------------------|
| Power         | Power                |
| Sleep         | Sleep / Timer        |
| Display       | Display / Media      |
| [ * ]/Display | Smart / List         |
| Party Light   | Sound / Title        |
| Light Mode    | Picture / Format     |
| Play Mode     | Shift + Play /       |
| Repeat/FM     | Green / APP / Repeat |
| 1             | 1                    |
| 2             | 2                    |
| 3             | 3                    |
| 4             | 4                    |
| 5             | 5                    |
| 6             | 6                    |
| 7             | 7                    |
| 8             | 8                    |
| 9             | 9                    |

| Original      | Rechange                    |
|---------------|-----------------------------|
| 0             | 0                           |
| Mega Bass     | Text / Goto                 |
| Rec to USB    | Rec / Rec Mode              |
| Media Mode    | Shift + Display / Media     |
| Subtitle      | Subtitle / EQ               |
| Audio         | Audio / Lang I/II           |
| Angle         | Eject / Surround            |
| Score         | TV/Radio /                  |
| Voice Changer | AV / Input / RDS            |
| Mic Level+    | Shift + CH+ /               |
| Vocal Fader   | Fav / Marker / PC           |
| Mic Echo      | Zoom / Size                 |
| Mic Level-    | Shift + CH- /               |
| Folder+       | Shift + Up                  |
| Folder-       | Shift + Down                |
| Key Control b | Yellow / YouTube / Repeat   |
| Key Control # | Blue / Prime Video / Random |



