



















Original	Rechange
 Power	 Power
 EQ	 Subtitle / EQ
 LG EQ	 Audio / Lang I/II
 Open/Close	 Eject / Surround
 Vol+	 Vol+
 Function	 Smart / List
 Preset/Folder+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Preset/Folder-	 CH- / Page-
 Sleep	 Sleep / Timer
 Repeat / Menu	 Green / APP / Repeat
 Repeat / Menu	 Up
 Repeat / Menu	 Menu / Home
 Info	 Info / Angle
 Left / I<< / Tun-	 << / Tune-
 Left / I<< / Tun-	 I<< / Preset-

Original	Rechange
 Left / I<< / Tun-	 Left
 Stop / Enter	 Stop / Hold
 Stop / Enter	 OK
 Right / >>I /	 >> / Tune+
 Right / >>I /	 >>I / Preset+
 Right / >>I /	 Right
 Program/Memo	 TV/Radio /
 Down /	 Play / Slow
 Down /	 Pause / Step / Freeze
 Down /	 Down
 Rec	 Rec / Rec Mode
 Clock	 D.Menu / Top
 Timer	 Shift + Sleep / Timer
 Set/RDS	 Display / Media
 PTY	 Setup / OPT /
 1	 1
 2	 2





Original		Rechange	
3	3	CO- STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI - BAT 0	0

Original		Rechange	

