





| Original | Rechange |
|--|--|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  -/-- |  Guide / EPG / -/-- |
|  AV |  AV / Input / RDS |
|  Menu |  Menu / Home |
|  Swap |  Back / Return |
|  OK |  OK |

| Original | Rechange |
|--|---|
|  Up |  Up |
|  PR+ |  CH+ / Page+ |
|  PR- |  CH- / Page- |
|  Down |  Down |
|  Right |  Right |
|  Vol+ |  Vol+ |
|  Left |  Left |
|  Vol- |  Vol- |
|  TV/TX |  Text / Goto |
|  PP |  Fav / Marker / PC |
|  16:9 |  Setup / OPT / |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  Violet |  Display / Media |
|  [] Smart Controls |  Picture / Format |





| Original | | Rechange | | Original | | Rechange | |
|---|------------------|---|-------------------|----------|--|----------|--|
|  | ♪ Smart Controls |  | Sound / Title | | | | |
|  | MIX))·((|  | Audio / Lang I/II | | | | |
|  | P100 |  | Sleep / Timer | | | | |
|  | SUB |  | Subtitle / EQ | | | | |
|  | Update |  | Zoom / Size | | | | |
|  | Hold |  | Stop / Hold | | | | |
|  | Doub |  | Eject / Surround | | | | |
|  | REV |  | TV/Radio / | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

