












 





Original	Rechange
	Zoom / Size
	Power
	TV/Radio /
	Guide / EPG / -/-
	Info / Angle
	Picture / Format
	AV / Input / RDS
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Smart / List

Original	Rechange
	0
	Display / Media
	Setup / OPT /
	Up
	Menu / Home
	Left
	OK
	Right
	Back / Return
	Down
	Exit / Cancel / Clear
	Vol+
	Fav / Marker / PC
	CH+ / Page+
	Vol-
	Audio / Lang I/II
	CH- / Page-





Original		Recharge	
	Mute		Mute / Dimmer
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow / Brightness-		Yellow / YouTube / Repeat
	Blue /		Blue / Prime Video / Random
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Subtitle		Subtitle / EQ
	<<		<< / Tune-
	<<		l<< / Preset-
	>>		>> / Tune+
	>>		>>l / Preset+
	Text		Text / Goto
	T.Opt		D.Menu / Top

Original	Recharge

