



Original	Rechange
Power	Power
Open/Close	Eject / Surround
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Vol+ TV	Vol+
TV/VCR	Smart / List
0	0
AV	AV / Input / RDS
Vol- TV	Vol-
Backward	<< / Tune-

Original	Rechange
Forward	>> / Tune+
Skip I<<	I<< / Preset-
Skip >>I	>>I / Preset+
Pause/Step	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
Display / CLK/CNT	Display / Media
Up/+ PR/TRK	CH+ / Page+
Up/+ PR/TRK	Up
i/Setup	Setup / OPT /
Left	Left
OK/Enter	OK
Right	Right
Disc Menu	D.Menu / Top
Down/- PR/TRK	CH- / Page-
Down/- PR/TRK	Down
Return	Back / Return

















 









 

 







Original		Recharge		Original		Recharge	
	O))/Audio		Audio / Lang I/II				
	[...]/Subtitle		Subtitle / EQ				
	Camera/Angle		Info / Angle				
	Zoom		Zoom / Size				
	Rec/ITR		Rec / Rec Mode				
	Lock		Text / Goto				
	Title		Sound / Title				
	Program		TV/Radio /				
	Marker		Fav / Marker / PC				
	Search		Red / Netflix / Search				
	Clear		Exit / Cancel / Clear				
	Repeat		Green / APP / Repeat				
	A-B/LP		Yellow / YouTube / Repeat				
	Random/CM		Blue / Prime Video / Random				
	*		Sleep / Timer				
	Resolution		Picture / Format				





Original	Recharge
 Power VCR	 Power
 Eject VCR	 Eject / Surround
 1 VCR	 1
 2 VCR	 2
 3 VCR	 3
 4 VCR	 4
 5 VCR	 5
 6 VCR	 6
 7 VCR	 7
 8 VCR	 8
 9 VCR	 9
 Vol+ TV	 Vol+
 0 VCR	 0
 Vol- TV	 Vol-
 << Backward	 << / Tune-
 >> Forward	 >> / Tune+
 Pause/Step VCR	 Pause / Step / Freeze

Original	Recharge
 Play VCR	 Play / Slow
 Stop VCR	 Stop / Hold
 Display VCR	 Display / Media
 i/Setup VCR	 Setup / OPT /
 O)/Audio VCR	 Audio / Lang I/II
 Rec/ITR	 Rec / Rec Mode
 Search VCR	 Red / Netflix / Search
 Clear VCR	 Exit / Cancel / Clear
 Repeat VCR	 Green / APP / Repeat
 A-B/LP VCR	 Yellow / YouTube / Repeat
 Random/CM Skip	 Blue / Prime Video / Random





Original		Recharge		Original		Recharge	
	Power TV		Power				
	AV TV		AV / Input / RDS				
	PR+ TV		CH+ / Page+				
	PR- TV		CH- / Page-				
	Vol+ TV		Vol+				
	TV/VCR		TV/Radio /				
	Vol- TV		Vol-				

