 


 





 










 












 




Original	Recharge
 Power	 Power
 Info	 Info / Angle
 Search	 Sleep / Timer
 Sources	 AV / Input / RDS
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 ←	 Back / Return
 Home	 Menu / Home
 =	 Setup / OPT /
 <<<	 <<< / Tune-
 ▶	 Play / Slow
 >>>	 >>> / Tune+
 ■	 Stop / Hold
	 Pause / Step / Freeze

Original	Recharge
 Rec	 Rec / Rec Mode
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Netflix	 Shift + Red / Netflix /
 Windows	 Display / Media
 Rakuten Tv	 Smart / List
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 CH+	 CH+ / Page+
 Exit/Tv	 Exit / Cancel / Clear
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3





Original		Rechange		Original		Rechange	
4	4	VIDEO	4				
5	5	TAPE	5				
6	6	TUNER	6				
7	7	AUX - HDD	7				
8	8	USB	8				
9	9	BLUETOOTH	9				
0	0	HDMI - SAT	0				
LIST TV GUIDE	Tv Guide	GUIDE EPG	Guide / EPG / -/--				
TEXT	Text	GOTO TEXT	Text / Goto				

